Print on Plain White Paper (Part No. 122919)

MIDMARK

Installation Instructions

Special Procedures Headrest (9A79)

Round Headrest (9A80)

for Models 111, 119, 411 and 419

1. Remove the standard headrest by removing the four screws that attach the headrest to the headrest bracket.

2. Attach the inner slide (1) to the headrest bracket (2) using four #10-24 x 3/8" flathead screws (3), lockwashers, and nuts.

NOTE

The inner slide has two different hole patterns. The four inner holes correspond to the 411 headrest bracket. The four outer holes correspond to the 111 and 119 headrest bracket.

3. Attach the outer slide (4) to the standard headrest using four #10 - 24 x 3/4" flathead screws (5) on Model 411 and 119.

NOTE

The outer slide has two different hole patterns. The four inner holes correspond to the 411 standard headrest. The four outer holes correspond to the 111 and 119 standard headrest.

4. Mount the 9A79 Special Procedures, 9A80 Round, or Standard Headrests to the table by sliding the outer slide (4) over the inner slide (2) until snug. Next, tighten the adjustment knob (6).

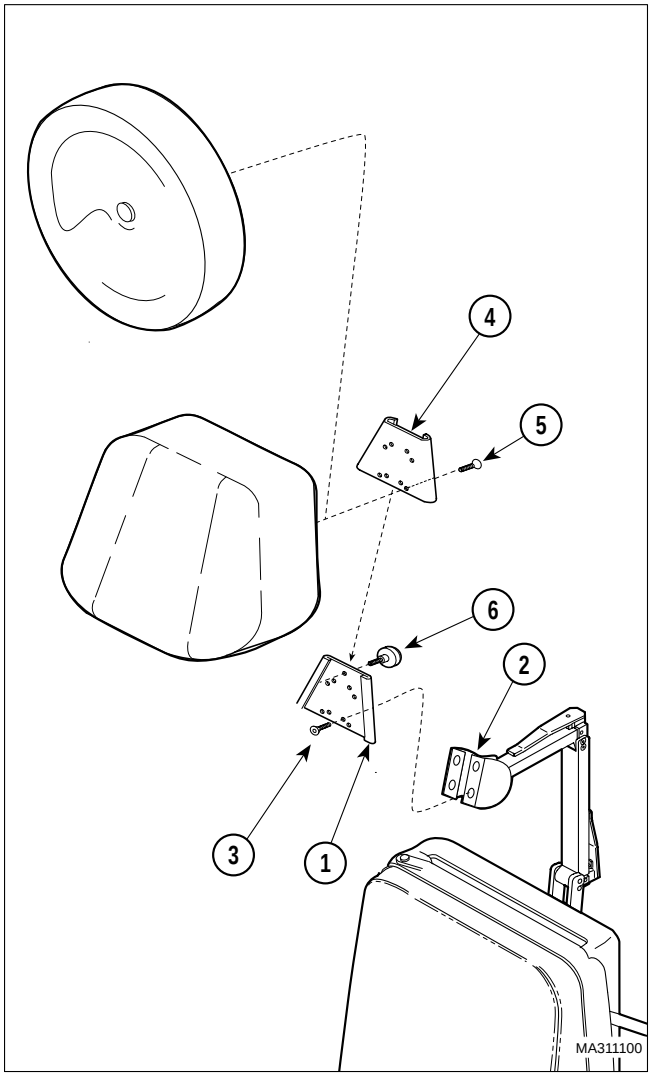

MIDMARK®

Midmark Corporation, Versailles, Ohio 45380 U.S.A.
937-526-3662 TELEX 288007 FAX 937-526-5542

© Midmark Corporation - 1996

003-0371-00 Rev. C